



ecowasher[®]-SE

USER'S MANUAL





WELCOME TO THE ECOWASHER® FAMILY!

THANK YOU FOR CHOOSING ECOWASHER!® WE'RE EXCITED TO HELP YOU TRANSFORM YOUR CLEANING ROUTINES, SAVE MONEY, AND CREATE A HEALTHIER LIFE! PLEASE TAKE TIME TO READ THROUGH THIS USER GUIDE CAREFULLY BEFORE OPERATING YOUR NEW ECOWASHER® UNIT.

IF YOU HAVE ANY QUESTIONS THAT WE HAVEN'T CLEARLY ADDRESSED IN THIS USER GUIDE, PLEASE FEEL FREE TO CONTACT OUR SUPPORT TEAM FOR MORE INFORMATION. WE'RE ALWAYS HAPPY TO HELP YOU!

SINCERELY,

Julius Toth

ECOWASHER® INVENTOR & CEO

PRODUCT INTRODUCTION

INSPIRED BY HOSPITAL TRUSTED TECHNOLOGY AND LOVED BY FAMILIES WORLDWIDE FOR OVER A DECADE, ECOWASHER® IS AN AWARD WINNING TECHNOLOGY DESIGNED WITH YOUR HEALTH IN MIND! WITH AN EASY 10 MINUTE INSTALLATION, ECOWASHER® ATTACHES DIRECTLY TO YOUR EXISTING RESIDENTIAL WASHING MACHINE, AND THEN THE FUN REALLY BEGINS!

USING UNIQUELY PATENTED TECHNOLOGY, ECOWASHER® USES ELECTRICITY TO SAFELY GENERATE A POWERFUL NATURAL OXIDIZER KNOWN AS OZONE - WHICH IS THEN INFUSED INTO YOUR WATER THROUGH A VENTURI INJECTION PROCESS AND THEN DISPERSED THROUGH THE ECOWASHER AND INTO YOUR WASHING MACHINE.

UNLIKE YOUR TYPICAL LAUNDRY ROUTINE, ECOWASHER® REQUIRES NO DETERGENT, FABRIC SOFTENER OR HOT WATER. SIMPLY TOSS YOUR DIRTY CLOTHES INTO YOUR WASHING MACHINE, SET TO A COLD WATER CYCLE, AND PRESS START TO BEGIN A LAUNDRY EXPERIENCE LIKE YOU'VE NEVER HAD BEFORE!

ADDITIONALLY ECOWASHER® NOW INCLUDES A SPRAYER HOSE ATTACHMENT, ALLOWING YOU TO EXTRACT THE OXIDIZED WATER FROM THE ECOWASHER® FOR OTHER CLEANING AND DISINFECTING TASKS THROUGHOUT YOUR ENTIRE HOME OR BUSINESS.

FEATURED BENEFITS

- EASILY ATTACHES TO YOUR EXISTING RESIDENTIAL STYLE WASHING MACHINE WITH A SIMPLE 10 MINUTE INSTALLATION.**
- WORKS AUTOMATICALLY WITH YOUR HOMES CURRENT COLD WATER SUPPLY - NO PROFESSIONAL PLUMBING EXPERIENCE OR FITTING REQUIRED. 290202**
- INSPIRED BY TRUSTED LAUNDRY TECHNOLOGY, USED FOR MANY YEARS BY HOSPITALS AND INSTITUTIONS.**
- EFFECTIVELY DEEP CLEANS, LIFTS DIRT, DEODORIZES, AND DISINFECTS WITHOUT ANY TOXIC CHEMICAL ADDITIVES OR HOT WATER.**
- LAB TESTED AND PROVEN TO DESTROY GERMS AND BACTERIA FROM YOUR LAUNDRY IN AS LITTLE AS 5 MINUTES. THIS INCLUDES BACTERIA FROM E.COLI, STAPH INFECTION AND MORE!**
- SAVES THE AVERAGE FAMILY OF FOUR \$700 OR MORE ON ANNUAL LAUNDRY DETERGENT AND HOT WATER COSTS!**
- SKIN SAFE SOLUTION - PERFECT FOR THOSE WITH ALLERGIES OR SENSITIVITIES TO LAUNDRY DETERGENT.**

USE AND SAFETY

- **BE SURE TO FOLLOW THE WASHING MACHINE CLEANING INSTRUCTIONS ON PAGES 6-7 PRIOR TO INSTALLATION.**
- **A MINIMUM WATER PRESSURE OF 20 PSI IS REQUIRED FOR OPERATION. HOWEVER, THE WATER PRESSURE SHOULD NOT EXCEED 100 PSI.**
- **USE ONLY THE NEW HOSE SUPPLIED WITH YOUR ECOWASHER® WHEN CONNECTING IT TO YOUR WASHING MACHINE. WE ALSO RECOMMEND REPLACING ANY EXISTING WASHING MACHINE HOSES THAT ARE MORE THAN 2 YEARS OLD.**
- **THE ECOWASHER® SHOULD ALWAYS BE HORIZONTALLY MOUNTED WITH THE INCLUDED BRACKET. DO NOT MOUNT THE ECOWASHER® VERTICALLY, UPSIDE DOWN OR AT AN ANGLE.**
- **ECOWASHER® REQUIRES 100-240V/50-60HZ POWER ON A 15 AMP FUSE OR CIRCUIT BREAKER.**
- **ECOWASHER® IS DESIGNED TO USE WITH A RESIDENTIAL STYLE WASHING MACHINE ONLY. DO NOT ATTEMPT TO CONNECT ECOWASHER® TO A COMPUTERIZED OR INDUSTRIAL SYSTEM.**

- **A DEDICATED ELECTRICAL OUTLET CIRCUIT, EQUIPPED WITH AN APPROVED GFCI OUTLET IS RECOMMENDED FOR SUPPLYING POWER TO YOUR ECOWASHER®**
- **NEVER USE AN EXTENSION CORD OR POWER ADAPTER OTHER THAN THE ONE PROVIDED WITH YOUR ECOWASHER®**
- **USE CAUTION WHEN ATTACHING HOSES. HAND TIGHTEN ONLY. DO NOT OVER TIGHTEN.**
- **WATER QUALITY MAY AFFECT THE PERFORMANCE OF YOUR ECOWASHER®. IF YOU HAVE HARD/WELL WATER, IT IS RECOMMENDED TO USE A WATER SOFTENER OR OTHER PRE-FILTER.**
- **DO NOT OPERATE YOUR ECOWASHER® IN A FREEZING ENVIRONMENT. IF FREEZING TEMPS ARE EXPECTED, DISCONNECT THE UNIT FROM YOUR WASHING MACHINE TO AVOID DAMAGE.**
- **ALWAYS USE A COLD WATER CYCLE FOR BEST RESULTS. REPEATED HOT WATER USE, OR WATER TEMPERAURES EXCEEDING 170 DEGREES CAN YIELD TO COMPONENT FAILURE.**

WASHING MACHINE CLEANING

IMPORTANT - FOR BEST RESULTS, PLEASE FOLLOW THESE CLEANING INSTRUCTIONS BEFORE INSTALLING YOUR ECOWASHER®

TOP LOAD CLEANING INSTRUCTIONS:

1 - SELECT HOT WATER ON THE LARGEST LOAD SETTING. ADD 4 CUPS OF VINEGAR AND LET THE MACHINE AGITATE FOR 1 MINUTE. THIS WILL NOT HARM THE ECOWASHER® AS LONG AS IT IS INSTALLED CORRECTLY.

2 - ADD 1/2 CUP BAKING SODA AND ALLOW MACHINE TO RUN AGAIN FOR 1 MINUTE TO MIX UP THE BAKING SODA. PAUSE THE WASHER AFTER 1 MINUTE AND ALLOW THE SOLUTION TO SIT FOR 1 HOUR TO HELP BREAK DOWN RESIDUE, THEN CONTINUE THE CYCLE UNTIL FINISHED.

3 - RUN ANOTHER HOT WASH CYCLE FROM START TO FINISH WITH NO ADDED PRODUCTS.

FRONT LOAD CLEANING INSTRUCTIONS:


1 - SOAK A RAG IN WHITE VINEGAR AND USE IT TO WIPE THE INSIDE OF THE WASHING MACHINE - INCLUDING DOOR SEALS AND THE SOAP TRAY.

2 - ADD 1/2 CUP OF BAKING SODA DIRECTLY INTO THE WASHING TUB OF THE MACHINE AND THEN CLOSE THE DOOR. SLOWLY POUR 4 CUPS OF VINEGAR INTO THE SOAP DISPENSER, ALLOWING IT TO DRAIN DOWN INTO THE TUB.

3 - SELECT HOT WATER ON THE LARGEST LOAD SETTING AND ALLOW THE WASHING MACHINE TO FILL. PAUSE AFTER 1 MINUTE AND ALLOW THE SOLUTION TO SIT FOR 1 HOUR TO BREAK DOWN RESIDUE, THEN CONTINUE THE CYCLE UNTIL FINISHED.

4 - RUN ANOTHER HOT WASH CYCLE FROM START TO FINISH WITH NO ADDED PRODUCTS.

PRODUCT DIAGRAM

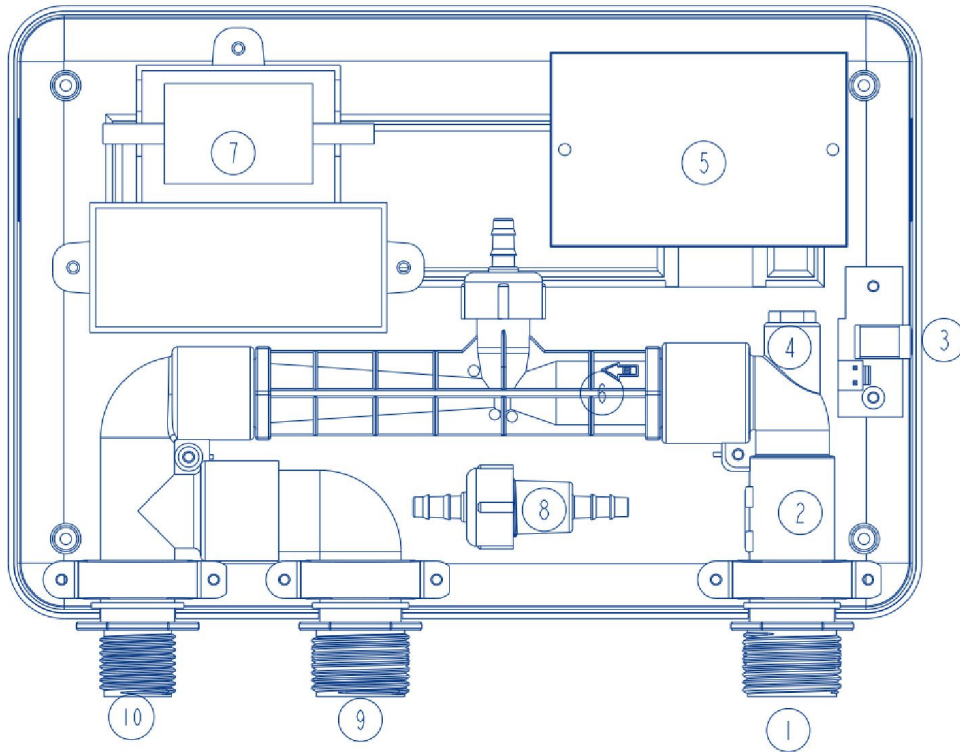

- 1 - WATER INLET - 3/4"
- 2 - WATER FLOW SWITCH
- 3 - POWER SUPPLY
- 4 - TEMP. SENSOR
- 5 - CONTROL BOARD

- 6 - VENTURI TUBE
- 7 - OXIDIZING MODULE
- 8 - CHECK VALVE
- 9 - WATER OUTLET - 3/4"
- 10 - HOSE OUTLET - 1/2"

INSTALLATION - PART 1

- 1 - CHOOSE AN AREA ON YOUR WALL NEAR YOUR WASHING MACHINE FOR INSTALLATION. THIS AREA SHOULD CLOSE TO A POWER OUTLET AND YOUR HOME'S WATER SUPPLY, WHERE YOUR CURRENT LAUNDRY HOSE IS CONNECTED.
- 2 - HOLD THE METAL MOUNTING PLATE IN THE DESIRED LOCATION WITH THE TABS FACING OUT. MARK YOUR SCREW HOLES WITH A PEN, THEN PLACE THE SCREWS AND SECURE THE MOUNTING PLATE EVENLY ON THE WALL.
- 3 - ALIGN THE 3 MOUNTING SOCKETS ON THE BACKSIDE OF THE UNIT WITH THE MOUNTING PLATE AND CAREFULLY SLIDE THE UNIT DOWN INTO PLACE UNTIL IT FEELS SECURE.
- 4 - TURN OFF YOUR HOME'S COLD WATER AND HOT WATER SUPPLY FAUCET, IF YOU HAVE NOT ALREADY.
- 5 - TURN YOUR WASHING MACHINE SETTINGS TO "COLD" WATER ONLY AND RUN THE WASHING MACHINE FOR A FEW MINUTES TO HELP REMOVE EXCESS WATER AND PRESSURE FROM THE COLD WATER LINE.

INSTALLATION - PART 2


IMPORTANT - HOSES SHOULD BE HAND TIGHTENED ONLY UNTIL THEY ARE SECURE. DO NOT USE PLYERS OR OVERTIGHTEN THE HOSES. FOR BEST RESULTS, APPLY PIPING TAPE TO EACH FITTING BEFORE CONNECTING THE HOSES.

6 - REMOVE THE EXISTING COLD WATER HOSE FROM YOUR COLD WATER SUPPLY AND ATTACH IT TO THE LOCATION MARKED "OUTLET" ON THE ECOWASHER® SYSTEM AS SHOWN ON THE ILLUSTRATION ON THE RIGHT. THE OTHER END SHOULD REMAIN ATTACHED TO THE BACK OF YOUR WASHING MACHINE.

7 - TAKE THE NEW HOSE INCLUDED IN THE BOX, AND ATTACH ONE END TO THE LOCATION MARKED "INLET" ON THE ECOWASHER® SYSTEM AS SHOWN ON THE ILLUSTRATION ON THE RIGHT.

8 - NOW ATTACH THE OTHER END OF THE NEW HOSE TO YOUR HOME'S COLD WATER SUPPLY AS SHOWN ON THE ILLUSTRATION ON THE RIGHT.

9 - THE FINAL HOSE TO ATTACH IS THE AUXILLARY SPRAYER HOSE. ATTACH THIS HOSE TO THE "HOSE OUTLET." IF YOU DO NOT WISH TO USE THIS OPTION, YOU CAN CLOSE IT OFF WITH THE INCLUDED CAP.

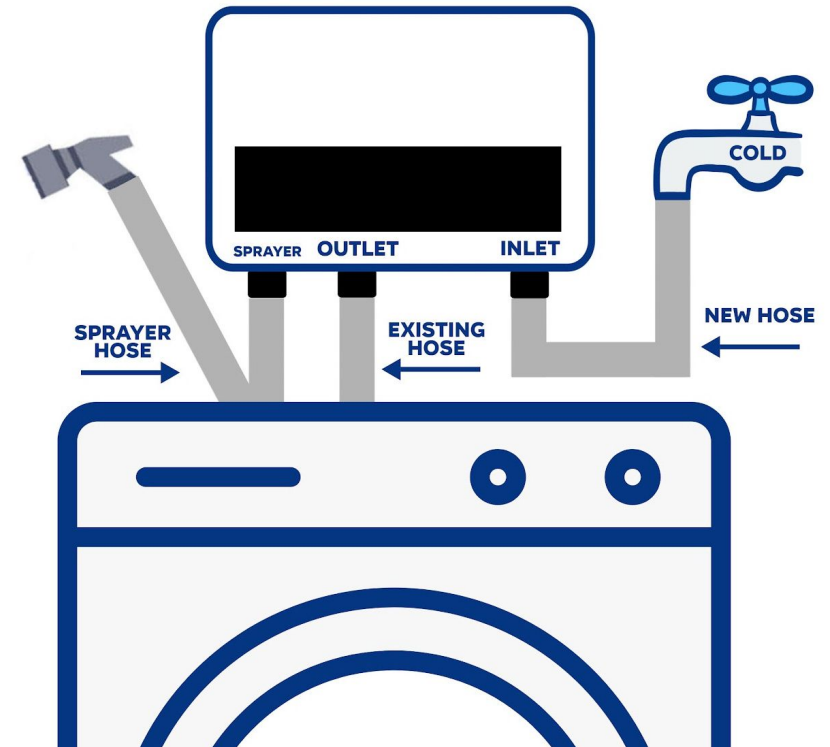

10- SLOWLY TURN YOUR COLD WATER SUPPLY FAUCET BACK ON. MAKE SURE THERE IS NO LEAKING FROM ANY OF THE COLD WATER HOSE LINES.


11 - PLUG IN THE DC ADAPTER TO THE ECOWASHER, THEN PLUG INTO THE POWER OUTLET. THE INSTALLATION IS NOW COMPLETE.

GENERAL OPERATION

1 - AFTER SUCCESSFUL INSTALLATION AND POWER CONNECTION, THE ECOWASHER® WILL CHIME ONCE AND THE POWER INDICATOR LIGHT  WILL BE ILLUMINATED. AT THIS TIME, THE MACHINE WILL BE IN STANDBY MODE UNTIL WATER FLOW IS ACTIVE.

2 - WHEN YOU BEGIN A WASH CYCLE AND WATER BEGINS TO FLOW, THE ECOWASHER® WILL TURN ON AND POWER INTO A DEFAULT HIGH CONCENTRATION OZONE LEVEL DISPLAYED BY A **BLUE "H"** LIGHT.

3 - WHEN WATER IS FINISHED FLOWING THROUGH THE ECOWASHER® AND INTO YOUR WASHING MACHINE, THE UNIT WILL RETURN TO STAND-BY MODE UNTIL THE RINSE CYCLE BEGINS.

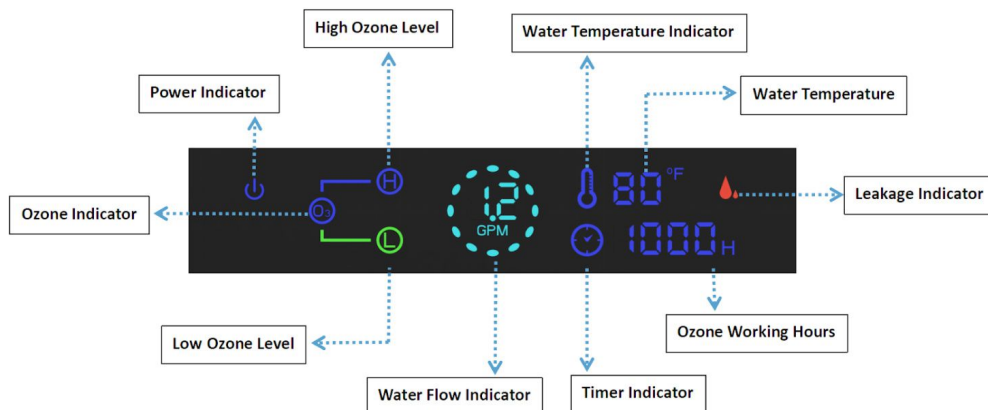

SETTINGS & INDICATORS

• TO ADJUST THE OZONE CONCENTRATION LEVEL, PRESS THE O3 TOUCH KEY ON THE DISPLAY PANEL.

• IN HIGH/DEFAULT MODE, THE O3 AND "H" INDICATOR LIGHTS WILL DISPLAY IN **BLUE**. THIS IS THE DEFAULT OZONE SETTING AND IS RECOMMENDED FOR MOST WASH CYCLES.

• IN LOW MODE, THE O3 AND "L" INDICATOR LIGHTS WILL DISPLAY IN **GREEN**. THIS OZONE CONCENTRATION SETTING IS RECOMMENDED FOR DELICATE FABRICS SUCH AS SILK OR LACE.

• IN "NO OZONE MODE" THE INDICATOR LIGHTS WILL NOT DISPLAY ANY COLOR.

• **WATER FLOW INDICATOR** - MEASURES THE REAL TIME FLOW OF WATER DURING THE WASH CYCLE.

• **WATER TEMPERATURE INDICATOR** - DISPLAYS THE REAL TIME WATER FLOW TEMPERATURE DURING THE WASH CYCLE.

• **OZONE HOURS INDICATOR** - RECORDS AND DISPLAYS THE SERVICE HOURS OF THE OZONE GENERATOR.


ALARM INDICATORS

MOISTURE ALARM

WHEN A LEAK IS DETECTED WITHIN THE ECOWASHER®, THE UNIT WILL DISPLAY A WATER LEAK INDICATOR ICON  SHOWN IN **RED**, ACCOMPANIED BY A BUZZING ALARM SOUND.

NOTE - IT IS POSSIBLE THAT THE MOISTURE ALARM MAY ACTIVATE WITHOUT ANY VISIBLE LEAKS. THIS IS DUE TO CONDENSATION BUILD-UP WITHIN THE UNIT. IN THIS CASE, PLEASE UNPLUG YOUR ECOWASHER® AND PAUSE OPERATION FOR AT LEAST 12 HOURS TO ALLOW THE UNIT TO DRY OUT.

OZONE MODULE INDICATOR

WHEN THERE IS AN ISSUE DETECTED WITH THE OZONE GENERATOR, THE O3 INDICATOR WILL DISPLAY A RED LIGHT  AND THE CONTROL BOARD WILL CUT OFF POWER TO THE OZONE GENERATOR COMPONENT.

IN THE EVENT OF AN OZONE ISSUE, IT IS SUGGESTED TO FIRST UNPLUG YOUR ECOWASHER® FROM POWER FOR 15-20 MINUTES TO RESET THE UNIT AND THEN TRY AGAIN.

IF ALARM INDICATORS PERSIST, PLEASE CALL OUR SERVICE DEPARTMENT AT 800-599-5191

OTHER USAGE NOTES

DAILY USE OF ECOWASHER®

THE USE OF ECOWASHER® IS VERY EASY AFTER PROPER INSTALLATION. SIMPLY OPERATE YOUR WASHING MACHINE AS USUAL ON A **COLD WATER SETTING ONLY**.

NON-USE OR VACATION CARE

IF YOU ARE ON VACATION OR WON'T BE OPERATING YOUR ECOWASHER® FOR AN EXTENDED PERIOD OF TIME, WE RECOMMEND THAT YOU UNPLUG THE POWER SUPPLY TO THE WASHING MACHINE AND ECOWASHER® AND TURN OFF YOUR WATER SUPPLY VALVE. THIS WILL HELP TO AVOID ACCIDENTAL FLOODING DUE TO WATER PRESSURE SURGE WHILE YOU ARE AWAY.

STAINS

WE SUGGEST THAT YOU PRE-TREAT STAINS AS YOU NORMALLY WOULD WHEN DOING LAUNDRY. NO LAUNDRY DETERGENT IS REQUIRED FOR NORMAL TO MODERATELY SOILED GARMENTS. FOR HEAVILY SOILED GARMENTS, WE SUGGEST ADDING AN EXTRA RINSE CYCLE TO THE WASH LOAD ACCORDING TO YOUR WASHING MACHINES SETTINGS.

AUXILIARY HOSE FEATURES

ECOWASHER® DOESN'T STOP AT YOUR CLOTHING, TOWELS AND LINENS! SIMPLY ATTACH THE INCLUDED AUXILIARY HOSE TO ACTIVATE AN ON-DEMAND CLEANING SOLUTION AT YOUR FINGERTIPS. FROM FLOORS TO COUNTERTOPS, ECOWASHER® CREATES AN EXCITING, FUN, AND EASY TO USE WAY TO TRANSFORM YOUR CLEANING ROUTINE!

1 - CLEAN YOUR CARPETS!

USE THE AUXILIARY HOSE ON YOUR ECOWASHER® TO FILL YOUR CARPET EXTRACTOR WITH POWERFUL OXIDIZED WATER TO HELP LIFT SUBBORN DIRT AND STAINS FROM YOUR CARPETS AND RUGS.

2 - CLEAN YOUR HARD FLOORS!

FILL YOUR MOP BUCKET OR ELECTRONIC FLOOR CLEANER WITH WATER FROM YOUR ECOWASHER® TO BREAK DOWN GRIME, CLEAN UP AFTER SPILLS, AND LEAVE YOUR FLOORS SPARKLING!

3 - CLEAN SURFACES!

FROM COUNTERTOPS, TO DOOR HANDLES - THESE COMMONLY TOUCHED SURFACES ARE CRAWLING WITH GERMS! DEDICATE AN EMPTY SPRAY BOTTLE AND FILL IT WITH WATER FROM YOUR ECOWASHER® TO SPRAY AND WIPE THESE SURFACES TO FIGHT BACTERIA!

4 - CLEAN YOUR FOOD ITEMS!

DID YOU KNOW MOST STORE-BOUGHT PRODUCE ITEMS CONTAIN TRACES OF PESTICIDES AND PRESERVATIVES THAT CAN BE POTENTIALLY HARMFUL TO YOUR HEALTH - AND TO THE TASTE OF YOUR FOOD! GIVE YOUR FRESH FRUITS, VEGGIES AND MEATS A QUICK SPRAY BATH FROM YOUR ECOWASHER® TO REMOVE THESE CHEMICALS FOR HEALTHIER AND TASTIER EATING!

NOTE - THE AUXILIARY HOSE FEATURE INCLUDED WITH YOUR ECOWASHER® SHOULD BE TREATED AS AN "ON-DEMAND" CLEANING TOOL AND USED WITHIN 30-45 MINUTES FOR THE HIGHEST OZONE CONCENTRATION AND BEST RESULTS.

FAQ – FREQUENTLY ASKED QUESTIONS

Q1 - WILL ECOWASHER® WORK WITH MY CURRENT WASHING MACHINE?

ECOWASHER® SYSTEMS CAN BE USED WITH ALMOST ANY RESIDENTIAL STYLE WASHING MACHINE. IT IS PERFECT FOR ANY HOME, OR BUSINESS THAT USES A NON-INDUSTRIAL STYLE WASHING MACHINE AND HAS ACCESS TO COLD WATER.

Q2 - DOES ECOWASHER® WORK WITH ALL WATER TYPES?

ECOWASHER WILL WORK WITH BOTH STANDARD CITY WATER, HARD OR WELL WATER SUPPLIES. HOWEVER, BETTER WATER QUALITY WILL YIELD THE BEST RESULTS. IF YOU HAVE HARD WATER, WE SUGGEST TO INSTALL A WATER SOFTENER FOR IMPROVED WATER QUALITY AND MINERAL FILTRATION.

Q3 - IS ECOWASHER® SAFE?

ECOWASHER® IS PERFECTLY SAFE TO USE IN YOUR HOME OR BUSINESS. IN FACT, SIMILAR TECHNOLOGY AS BEEN USED FOR DECADES BY HOSPITALS AND OTHER INSTITUTIONS FOR LAUNDRY AND OTHER DISINFECTING USES!

Q4 - DO I NEED TO PRE-TREAT STUBBORN STAINS OR HEAVILY SOILED ITEMS?

WHILE THE ECOWASHER IS TOUGH ON DIRT AND STAINS, YOU MAY CONTINUE TO TREAT STUBBORN STAINS WITH YOUR METHOD OF CHOICE. WE ALSO SUGGEST SETTING YOUR WASHING MACHINE TO AN EXTRA RINSE CYCLE FOR AN EXTRA BOOST OF CLEAN!

Q5 - WHY DO I HAVE TO USE A COLD WATER CYCLE WHEN USING ECOWASHER®?

DURING REGULAR OPERATION, ECOWASHER® RELEASES O3 TO DEEP CLEAN, REMOVE ODORS AND DESTROY GERMS FROM YOUR LAUNDRY. THESE POWERFUL O3 MOLECULES ARE MOST POWERFUL WHEN COMBINED WITH COLD WATER, AS WARM TEMPERATURES CAN CAUSE THEIR PURIFYING STRENGTH TO RAPIDLY DEplete.

Q6 - WHAT IS THAT SMELL?

IF YOU ARE SMELLING AN AROMA IN YOUR LAUNDRY ROOM OR WASHING AREA DURING REGULAR OPERATION, HAVE NO FEAR! THIS SCENT IS GENERATED BY YOUR ECOWASHER AND OCCURS AS THE POWERFUL CLEANSING MOLECULES ARE COMBINING WITH THE WATER.

TROUBLESHOOTING

ECOWASHER® WILL NOT POWER ON -

THIS IS LIKELY DUE TO POWER SUPPLY CONNECTION ISSUE. BE SURE TO CHECK THE POWER CORD FOR SECURE CONNECTION, AND MAKE SURE THAT YOUR COLD WATER SUPPLY IS TURNED TO THE ON POSITION TO ALLOW FOR PROPER WATER PRESSURE. REMEMBER, THE ECOWASHER® WILL REMAIN IN STAND-BY MODE UNTIL THE WASHING MACHINE IS RUNNING.

ECOWASHER® IS DISPLAYING A RED LIGHT -

THIS IS AN INDICATION OF AN ISSUE WITH THE OZONE GENERATOR, OR THAT A LEAK HAS BEEN DETECTED.

1 - IF THE OZONE INDICATOR  IS FLASHING RED, UNPLUG YOUR ECOWASHER® FROM POWER FOR 15-20 MINUTES TO RESET THE UNIT AND THEN TRY AGAIN.

2 - IF THE MOISTURE INDICATOR  IS FLASHING RED AND CREATING AN ALARM SOUND, IMMEDIATELY TURN OFF THE WATER SUPPLY AND UNPLUG THE UNIT. IF NO LEAK IS PRESENT, ALLOW UNIT TO REST FOR 12+ HOURS TO EVAPORATE ANY CONDENSATION BUILD-UP.

ECOWASHER® IS NOT EMITTING O3 SMELL -

WITH PROPER INSTALLATION, YOU SHOULD TYPICALLY NOTICE AN ENERGIZED AROMA IN YOUR LAUNDRY ROOM OR NEAR YOUR WASHING MACHINE DURING THE WASH CYCLE. IF YOU DO NOT SMELL OZONE -

1 - MAKE SURE THE ECOWASHER® IS SET TO THE CORRECT OZONE MODE - SEE PAGE 13 FOR SETTINGS

2 - CHECK FOR AN OBSTRUCTIONS IN THE CONNECTIONS BETWEEN THE ECOWASHER® AND WASHING MACHINE WHICH COULD HINDER WATER FLOW SUCH AS A PINCHED OR TWISTED HOSE LINE.

ECOWASHER® ISN'T CLEANING MY CLOTHES -

YOU KNOW YOUR CLOTHES BEST. IF YOUR ECOWASHER® DOESN'T SEEM TO BE DOING THE TRICK, STOP OPERATION IMMEDIATELY AND CHECK YOUR WASHING MACHINE SETTINGS TO MAKE SURE THAT YOU ARE USING A COLD WATER SETTING, AS WELL AS MAKING SURE YOU ARE USING AN ADEQUATE FILL SETTING FOR THE LOAD SIZE YOU ARE WASHING. FOR HEAVILY SOILED GARMENTS, WE OFTEN SUGGEST USING AN EXTRA RINSE CYCLE SETTING.

PRODUCT SPECIFICATIONS



PRODUCT NAME: ECOWASHER® SE
MODEL NUMBER: EW-SE
POWER INPUT: AC 100-240V / 50-60HZ
POWER OUTPUT: DC 12V 3A / 36W
WATER PRESSURE: 20 PSI - 100 PSI
WATER FLOW - 3.5 - 8 LITERS/MINUTE
OZONE CONCENTRATION: 0 - 1/2 MG/LITER
PRODUCT DIMENSIONS - 9.44 X 7.3 X 2.5 INCHES
PRODUCT WEIGHT - 2.7 LBS

WARRANTY INFORMATION

TO REGISTER YOUR ECOWASHER® WARRANTY, PLEASE FILL OUT THE INCLUDED WARRANTY CARD, OR VISIT WWW.ECOWASHER.COM/REGISTER TO FILL OUT AN ONLINE REGISTRATION FORM. IF YOU ARE GIVING THE ECOWASHER® AS A GIFT OR PURCHASING ON BEHALF OF SOMEONE ELSE, THE WARRANTY SHOULD BE REGISTERED ONLY BY THE RECEIVER OF THE UNIT.

ECOWASHER® PURCHASES ARE WARRANTED TO BE FREE FROM ALL DEFECTS IN MATERIAL AND WORKMANSHIP FOR PERIOD OF ONE (1) YEAR FROM THE DATE OF PURCHASE.

IN THE EVENT OF A VERIFIED WARRANTY CLAIM, TOTTH GROUP INC, DISTRIBUTOR OF ECOWASHER®, AT THE DISCRETION OF OUR SERVICE DEPARTMENT, AGREES TO REPAIR OR REPLACE A DEFECTIVE ECOWASHER® AND/OR PARTS TO BRING THE UNIT BACK TO WORKING CONDITION. UPON COMPLETION OF REPAIR, THE UNIT AND IT'S PARTS SHALL BE WARRANTED FOR THE REMAINING PORTION OF THE ORIGINAL WARRANTY TERMS UNLESS OTHERWISE AUTHORIZED.

THIS WARRANTY IS SUBJECT TO EXCEPTIONS SHOULD THE EQUIPMENT BE FOUND TO BE SUBJECT TO ABUSE, NEGLIGENCE OR UNAUTHORIZED SERVICE.

TO SUBMIT WARRANTY CLAIM, PLEASE CONTACT US AT 800-599-5191 OR BY EMAIL AT SERVICE@ECOWASHER.COM



**LEARN MORE AT
WWW.ECOWASHER.COM**